



SERVANTE TECHNIQUE // TECHNICAL TROLLEY


Notice de pose des bandes adhésives // Installation instructions for adhesive strips



15°C < T° < 25°C




Référence : ART M0219




Référence : ARTM0219

FRA Instructions de montage	KOR 조립설명서
CES Pokyny pro montáž	LIT Montavimo instrukcija
DNK Monteringsveiledning	LAV Montāžas instrukcijas
DEU Einbauanleitung	NLD Inbouwhandleiding
ENG Installation instructions	NOR Monteringsveiledning
SPA Instrucciones de montaje	POL Instrukcje wbudowania
EST Paigaldusjuhised	POR Instruções de montagem
FIN Asennusohje	RON Instrucțiuni de montaj
ELL Οδηγίες συναρμολόγησης	RUS Инструкция по монтажу
HRV Návod k montáži	SLK Návod na zabudovanie
HUN Beépítési utasítások	SLV Navodila za inštalacijo
ITA Istruzioni per il montaggio	SWE Montageanvisning
JPN 取付 说明书	TUR Montaj talimatları


1

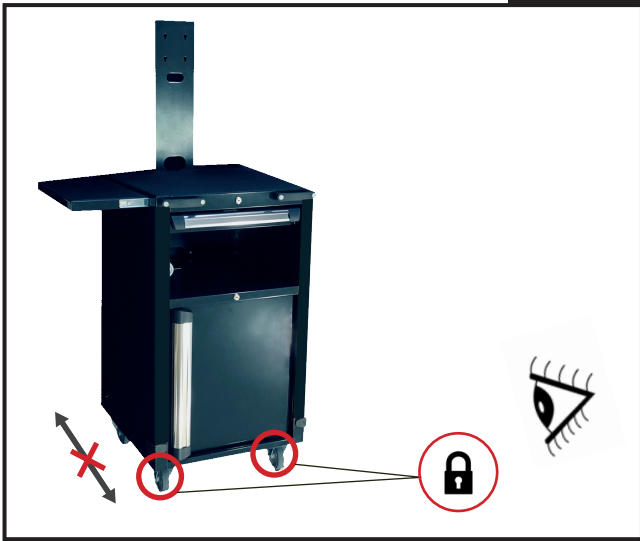


2

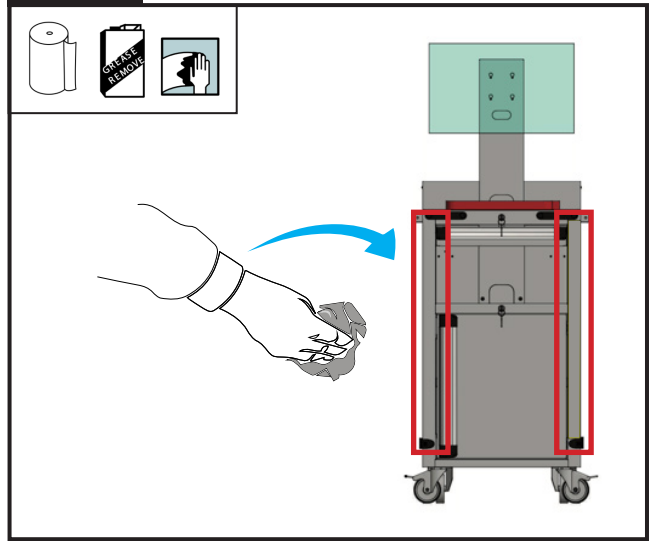


3

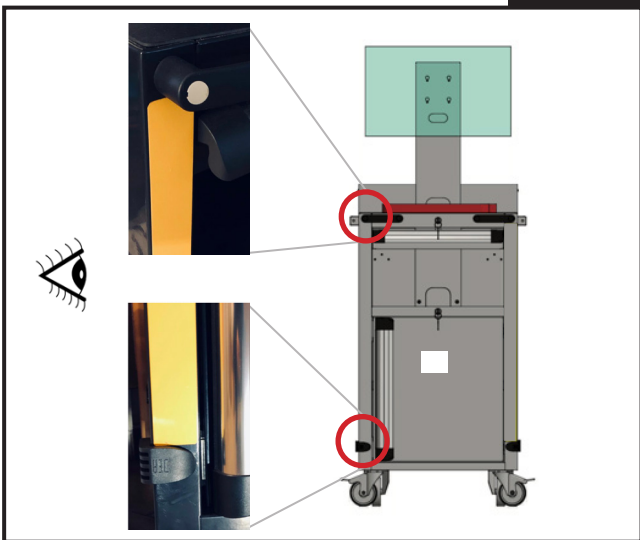

4

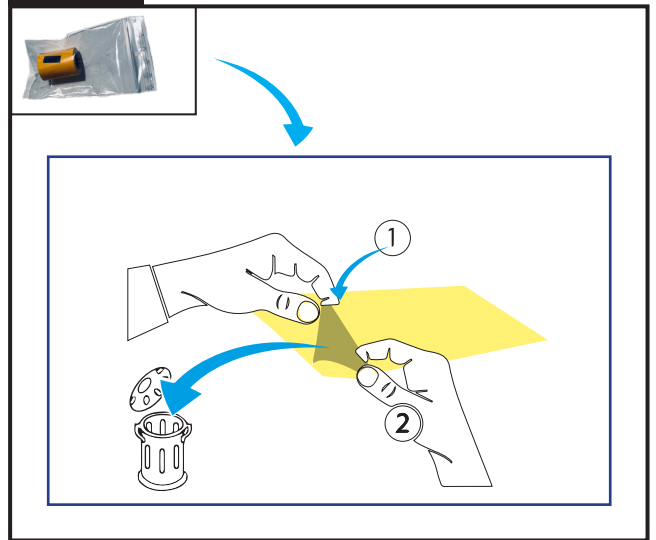

5

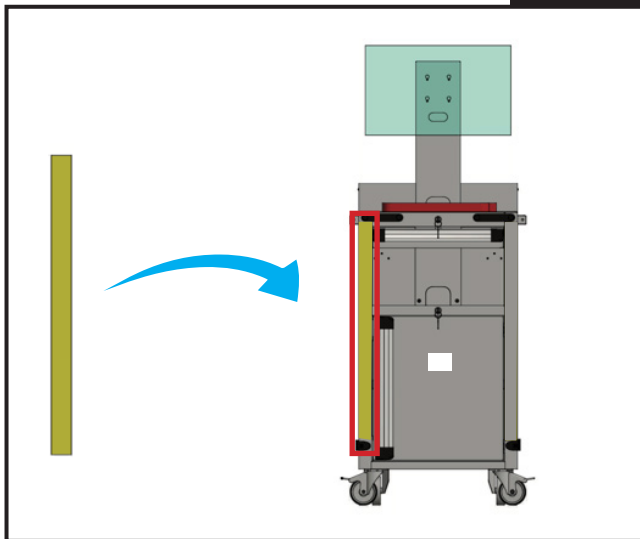

6

